
DETAILED MEASUREMENTS

FRENCH BALCONY WITH ALUMINIUM POSTS

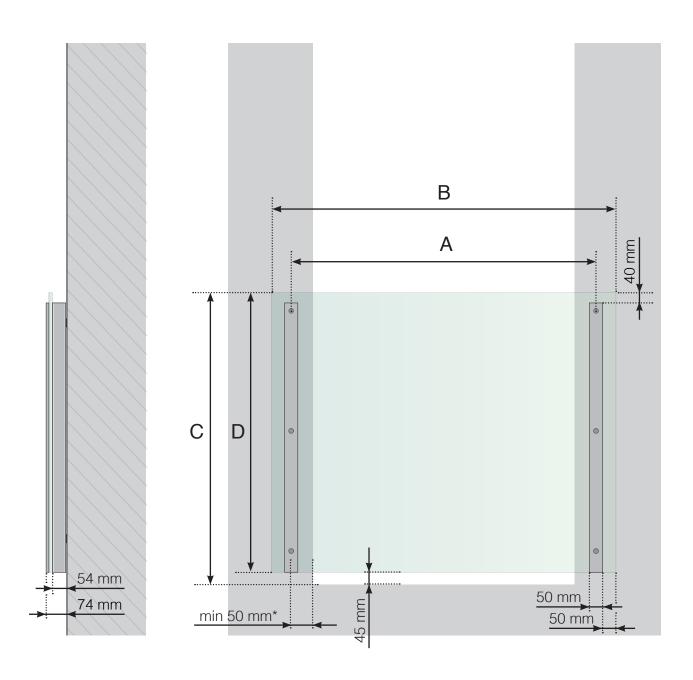


- A Post c/c-measurements
- B The width of the glass depends on the c/c measurements of the posts
- C Total height of the railing
- D Glass height



^{*} When attaching to brick or concrete, fasten the vertical support at least 50 mm, and ideally 75 mm, from the wall edge.

DETAILED MEASUREMENTS

FRENCH BALCONY WITH POSTS AND CROSSBARS IN ALUMINIUM

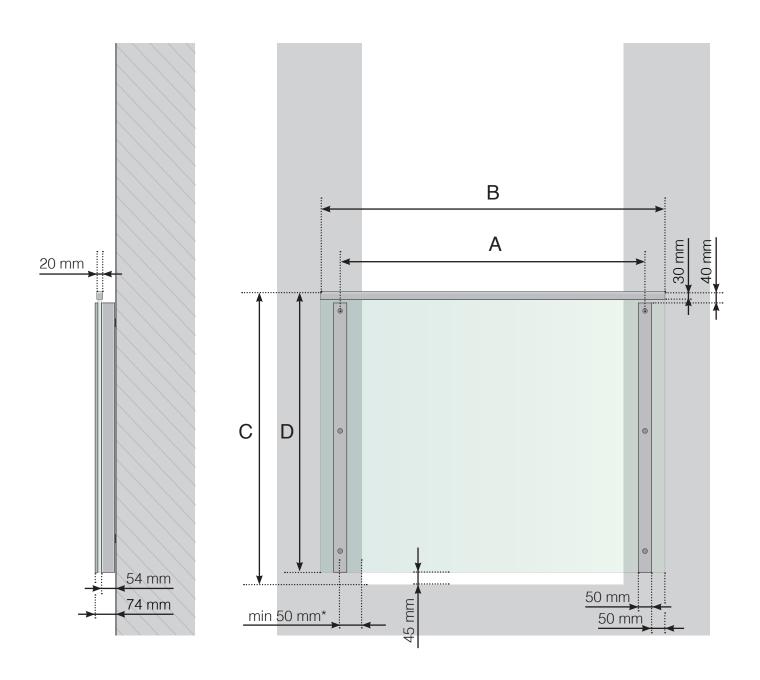

- A Post c/c-measurements
- B The width of the glass depends on the c/c measurements of the posts
- C Total height of the railing
- D Glass height



^{*} When attaching to brick or concrete, fasten the vertical support at least 50 mm, and ideally 75 mm, from the wall edge.